

Printer Selection Help

Please select the printer using UP/DOWN arrow keys.
For USB printer please ensure that the printer is powered on and the printer USB cable is connected to the NGIS

The inkjet printer should be PCL3 compliant.

Example:

HP DeskJet 3820v
HP Deskjet 460C Mobile
HP DeskJet 5440
HP DeskJet 5550
HP DeskJet 5650
HP DeskJet 5740
HP DeskJet 5940
HP DeskJet 6122
HP DeskJet 6540
HP Deskjet 6940
HP Deskjet 6980
HP Deskjet 7360
HP DeskJet 842C
HP DeskJet 895Cse
HP DeskJet 932C
HP DeskJet 940C
HP DeskJet 952C
HP DeskJet 970Cse
HP Deskjet 9800
HP Deskjet D5160
HP Deskjet D7160
HP Deskjet D7360
HP Officejet 6310 All-In-One
HP Officejet J5780 All-In-One
HP Officejet K550 Color
HP Photosmart 8050
HP Photosmart C3180 All-In-One
HP Photosmart C5180 All-In-One
HP Photosmart C5280 All-In-One
HP Photosmart C6180 All-In-One
HP Photosmart C7180 All-In-One All-In-One
HP Photosmart 8050